VOX
. 6, /

ALUMINIUM RADIATORS







### GLOBAL provides a 10 year warranty from the production date

(stamped on the side of each sections)
The conventional warranty grants the sole right to free replacement of the radiator which, due to defects originating from defects in material or wokmanship, is not fit for purpose or its ordinary intended use. Replacement radiators shall be delivered free of charge to the retailer who sold the radiator to the end customer or his installer.

The warranty is valid on the condition that the installation and the system to which the product is connected are performed by qualified/authorised personnel to top workmanship standards and in compliance with the regulations and requirements of the sector in force; it is also valid on the condition that there has been full compliance with warrings and instructions for proper installation, use and maintenance of the product indicated in the technical documentation under the paragraph entitled *correct installation*, use and maintenance instructions, available and downloadable from the TECHNICAL INFO section on the globalradiatori.it website. The warranty is regulated by further conditions indicated in the technical catalogue and the CONVENTIONAL WARRANTY section on the globalradiatori.It website.

model	dimensions mm				   Ø	dry weight	water	heat output EN 442		ovnonent	coefficient
	Α	B width	C depth	D pipe centres	connection	approx. Kg	content litres	ΔT 50°C	ΔT 30°C	exponent n	Km
	overall height							Watt	Watt		<u> </u>
VOX 800	890	80	95	800	1"	2,21	0,56	181	92	1,33709	0,97001
VOX 700	790	80	95	700	1"	1,95	0,53	164	83	1,32938	0,90292
VOX 600	690	80	95	600	1"	1,68	0,50	146	75	1,31199	0,86156
VOX 500	590	80	95	500	1"	1,45	0,46	127	65	1,30495	0,76989
VOX 350	440	80	95	350	1"	1,12	0,35	95	49	1,28445	0,62313
VOX 200**	290	80	95	300	1"	0,86	0,26	62	32	1,27201	0,42689

<sup>\* 1</sup> Watt = 0.863 Kcal/h

The heat output is certified by the Institute of engineering *Politecnico* in Milano according to the norm EN 442.

# 05 EN 442




#### EXAMPLE FOR A DIFFERENT ΔT FROM ΔT 50°C

If you need to know a radiator heat output (P) with different  $\Delta T$  from  $\Delta t$  50°C, use the following characteristic equation:  $P=Km \cdot \Delta T^n$ Example for the Vox 600 model with  $\Delta T=60$ °C  $\rightarrow P=0.86156 \cdot 60^{1.31199}=185$  Watt

#### EXAMPLE OF HEAT OUTPUT READINGS WITH DIFFERENT ΔT FROM ΔT 50°C

model	ΔT 20°C	ΔT 25°C	ΔT 30°C	ΔT 35°C	ΔT 40°C	ΔT 45°C	ΔT 50°C	ΔT 55°C	ΔT 60°C
VOX 800	53	72	92	113	135	157	181	206	231
VOX 700	48	65	83	102	122	142	164	186	209
VOX 600	44	59	75	91	109	127	146	165	185
VOX 500	38	51	65	80	95	111	127	144	161
VOX 350	29	39	49	60	71	83	95	107	120
VOX 200	19	26	32	39	47	54	62	70	78

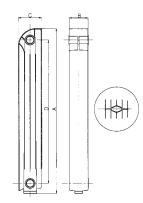


The expected heat output is obtained by observing the distances specified below:

- ≥ cm 3 from the wall
- ≥ cm 10 from the floor
- ≥ cm 10 from the shelf or window-sills

In order to prevent the thermal expansion of the system from causing noise in correspondence with the heaters, it is advisable to use plastic brackets to support the radiators (items A004, A025, A027 or A029 in our catalogue).

#### CORRECT INSTALLATION, USE AND MAINTENANCE INSTRUCTIONS

- The Vox radiators can be used in all hot water or vapour heating installations up to 110°C with a working pressure up to 1600 K Pascal 16 bar.
- They can be installed in systems with iron, copper or thermoplastic pipes.
- In order to protect the system from scaling and corrosion processes, which affect radiators, pipes and boilers, the INI-CTI 8065 Standard provides for the treatment of the filling water of the system, without distinguishing between aluminium, steel or cast iron.
- Among the various products to be added to the system in accordance with the abovemen tioned UNI Standard, there is a specific one for aluminium, an aliphatic film-forming polyamine marked under the name Cillit-HS 23 Combi in the quantity recommended by the manufacterer. However, it is useful to check the pH value of the water, which should preferably be between 6.5 and 8.
- It is recommended to install automatic air vent valves on each radiator.
- Avoid closing the radiator shut-off valves completely in order to allow any gas that may be inside the radiators to escape through the automatic air vent valve that is compulsory in every heating system, thus avoiding possible overpressure that could damage the radiators.
- If one or more batteries are to be excluded from the circuit, an automatic air vent must be fitted to each battery.
- For a good preservation of the paint, it is necessary that the radiators, before and after installation, are not kept in very humid environments (inside showers, in saunas, in Turkish baths, near swimming pools, etc.). If paint comes off at one point on the radiator, aluminium oxide con from and cause the paint to peel off completely. Do not use porous clay humidifiers.
- To clean the outside of the radiator, do not use abrasive or chemically corrosive/aggressive products of any kind, as the use of water and neutral detergents is sufficient and the operation must be carried out when the radiator is cold to preserve the original brillance of the paint over time
- Do not place weights and/or objects on the radiators. Do not use radiators for any purpose other than as a heater (e.g.: as a bench/stand, ladder, to store furniture or objects).

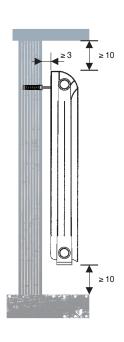

<sup>\*\*</sup> The NF certification doesn't include Vox 200 model

## ACCESSORIES



ANGLE BRACKET A003 galvanized A004 white plastic



A025 170 mm whit expansion plug bracket white or special colours (pair)



A015 white floor fixing system



A237 white handy grip A238 chrome handy grip



REDUCER KIT WITH SILICONE GASKETS AND ADJUSTABLE VALVE

A043 3/8" for 200/D radiators - 800 mm - white or chrome

A046 1/2" for 200/D radiators - 800 mm - white, chrome, special colours

**A048** 3/4" for 200/D radiators - 800 mm - white or chrome

A007 1" plug gasket 1,50 mm

A021 silicone gasket for plugs and reducers

800A

1" nipple gasket 1,00 mm

A009 1" nipple



A013 1" float type air vent valve right or left



MANUAL AIR VENT VALVE

A012 1/8" A039 1/4" A040 3/8"





A041 1/2" adjustable manual



air vent valve - white





A042 1/2" automatic air vent valve - chrome



A038 1/2" adjustable manual air vent valve - chrome




A019 plug wrench



Δ027 universal brackets white blister pack (pair)



A029 square brackets white blister pack (pair)



A033 800 mm A034 700 mm A035 600 mm A036 500 mm A037 350 mm



TOWEL BAILS

A202

A201 48 cm white

48 cm chrome

A010 RAL 9010 white or special colours spray can



A017 RAL 9010 white marker



A079 hex key with lever **A080** hex key 500 mm A081 hex key 800 mm





white glossy

**RAL 9010** 



cod. 11 white sand **RAL 9016** 

cod. 12 white matt

cod. 01 ivory glossy

**RAL 1013** 

cod. 05 metallic matt beige

cod. 06

cod. 07 metallic metallic matt matt quartz dark grey

cod. 08 metallic matt silver grey



cod. 09 metallic matt rust



standard colour

**special colours** see the Colour Card

The colours are indicative. For technical printing reasons, it is no possible to faithfully reproduce the paints used. The colour of the products supplied may differ from that shown in this catalogue.







